
Baja Motorsports, LLC Set-up Instructions DR49 Removal from crate


1. Remove cardboard carton from metal frame.




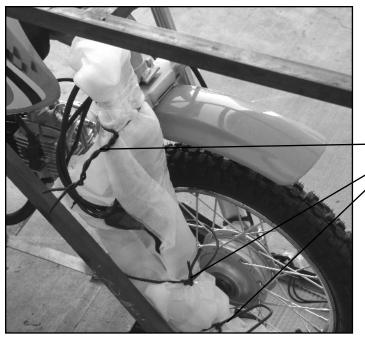


2. Remove wire straps and foam covering from handlebar.

Removal from crate

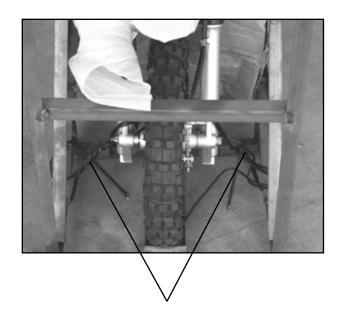

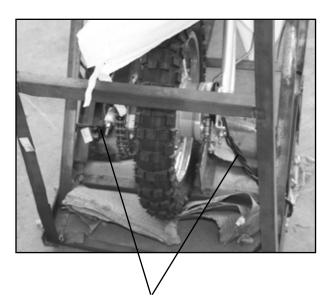


3. Remove wire staps from front forks and rear swing arm

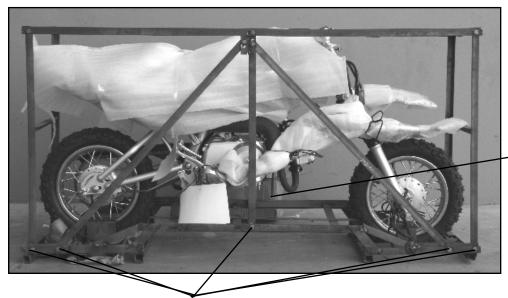

4. Remove bolts from both sides of metal frame remove foam covering and hardware box.




Hardware box





5. Remove bolts holding metal frame to handlebar bracket.

Hardware Box Contents

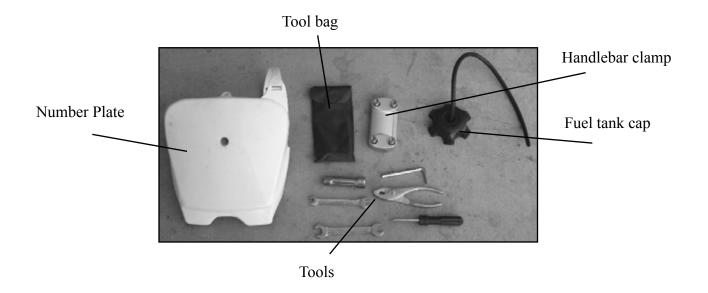


Handlebar and Number plate Installation




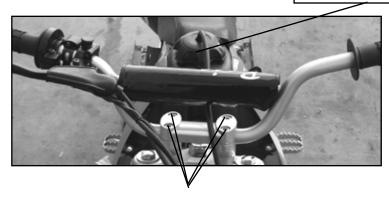

2. Install handlebars by using handlebar clamp provided. Torque bolts to 25Nm (18.5ft.lb.)

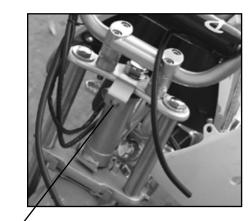


3. Attach number plate by removing bolt and placing plate over front forks.

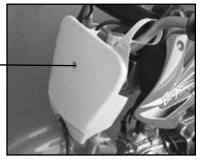

Gas and Oil

1. Fill engine with correct amount of oil. Refer to owners manual for oil types and quantity.

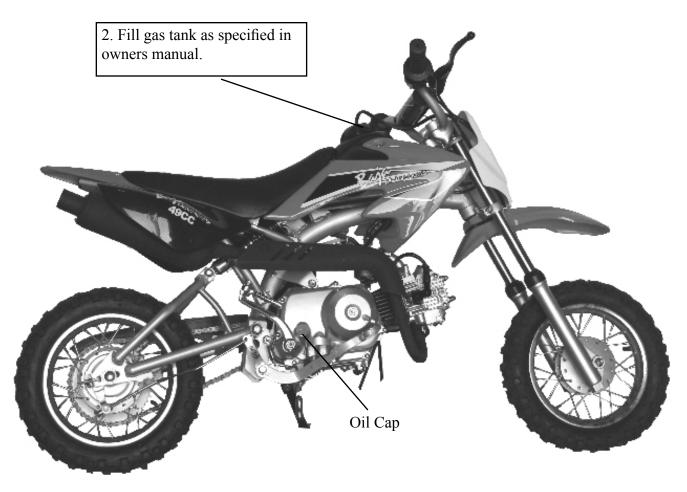

3. Refer to owners manual for proper starting instructions.

!!WARNING!!

This engine may be shipped with packing oil in the engine. This oil should be drained and replaced with new engine oil as described in the owners manual. Never attempt to start the engine without first replacing the engine oil with the proper amount and grade as described in the owners manual.